Electrolux

CYCLONE **POWER**

BAGLESS HOME CLEANING SYSTEM

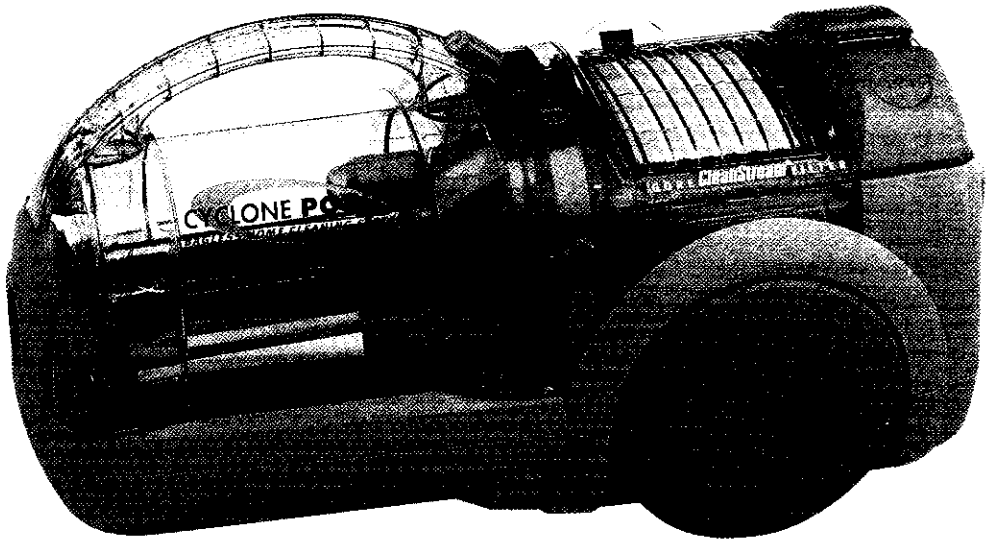

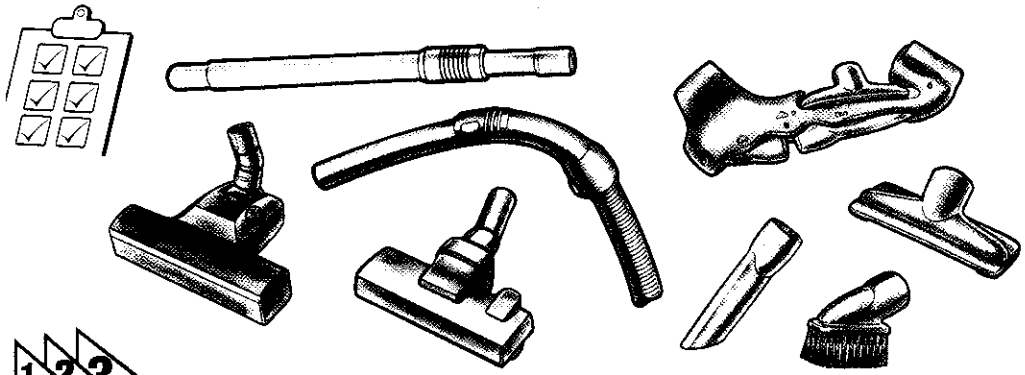

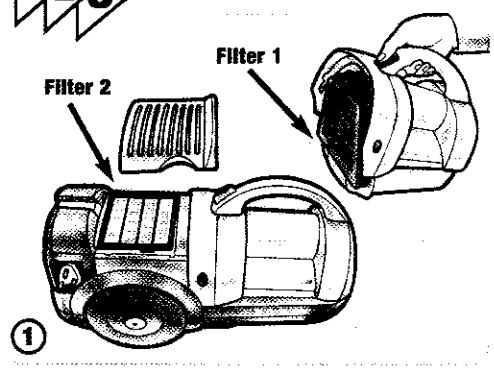

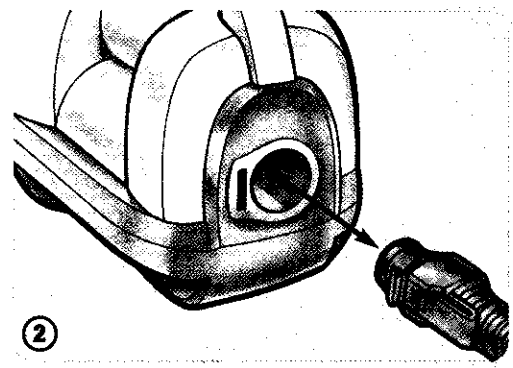

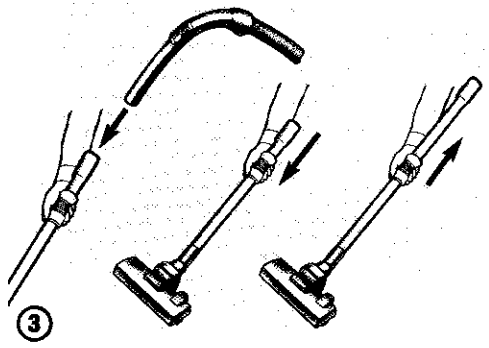

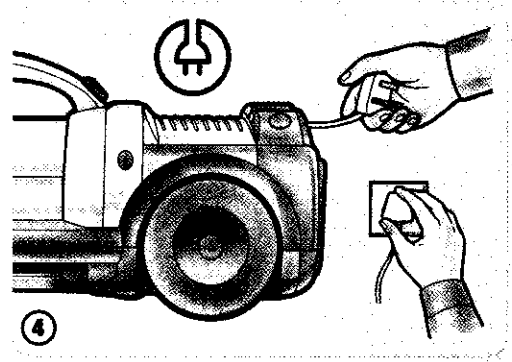

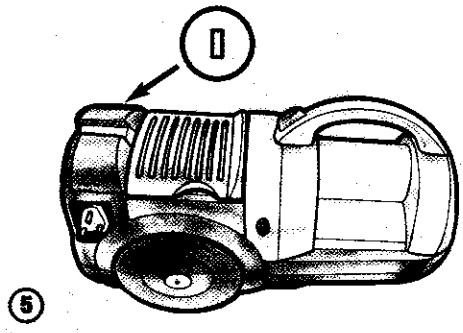

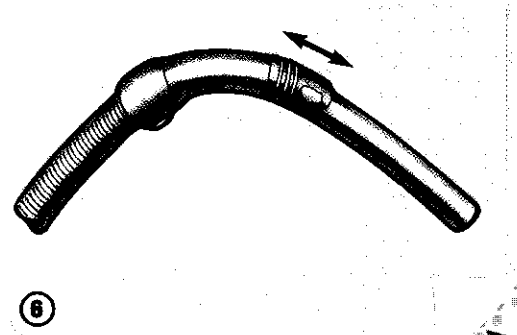

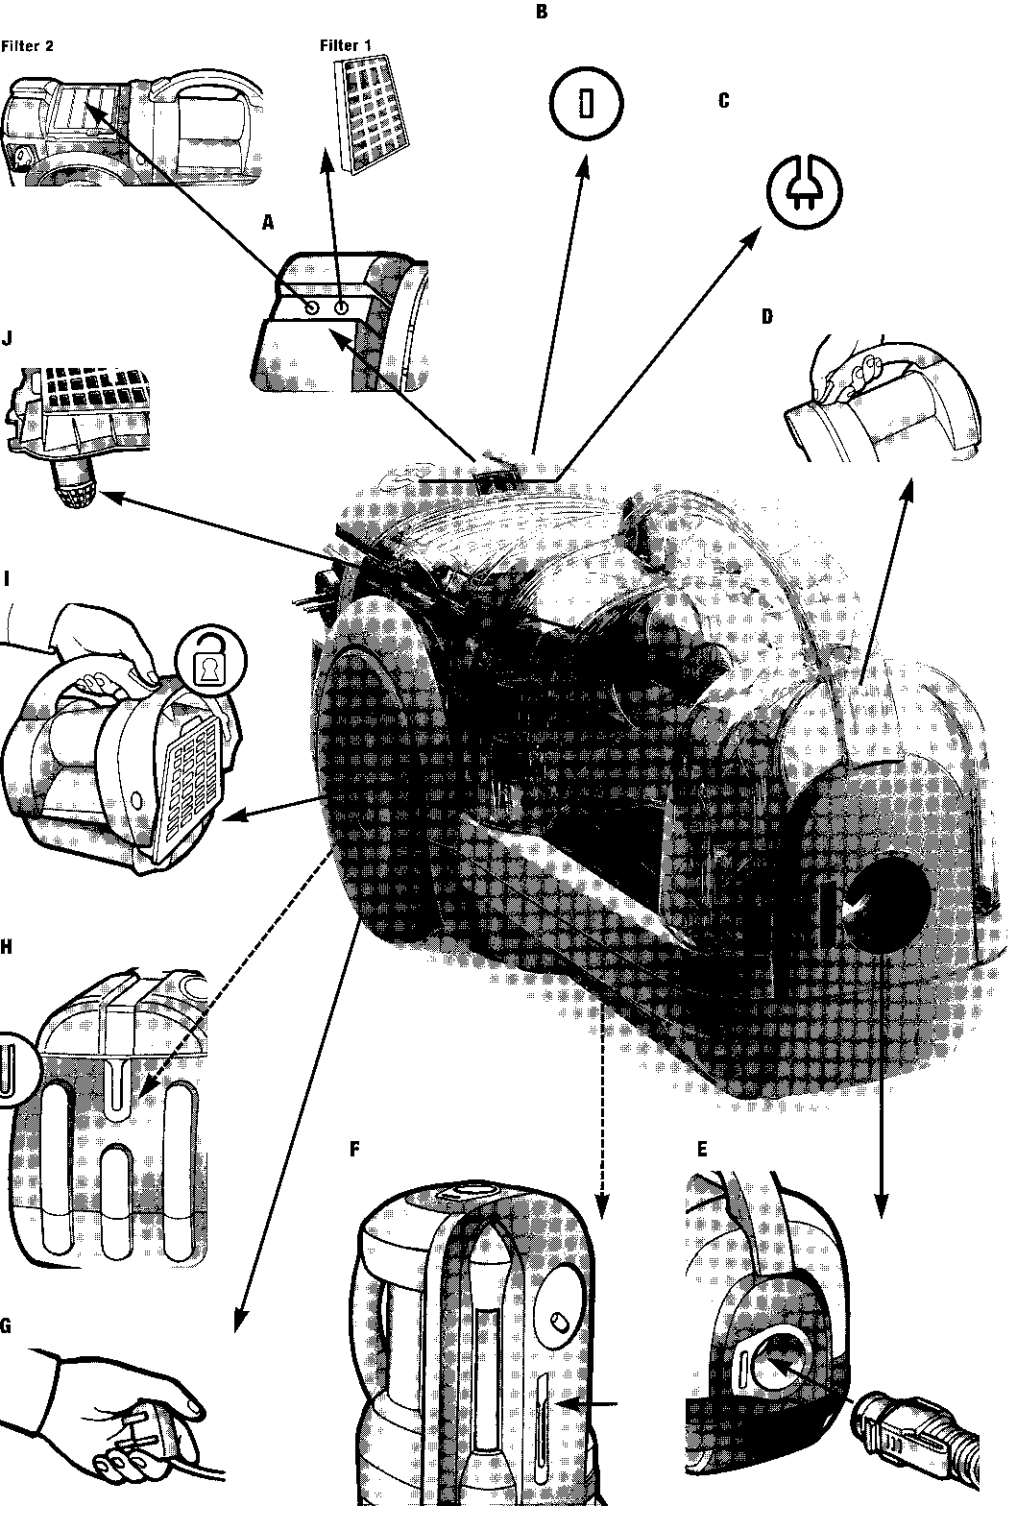

English CYCLONE POWER

Before you start, please refer to electrical safety supply instructions (U.K. and Ireland only).

Keep both cover flaps open and cross-reference pictures with text where necessary.

- Telescopic tube
- Swivel hose and handle with manual suction control
- Combination carpet/hard floor nozzle
- Carpet revitaliser brush
- Narrow crevice nozzle
- Upholstery nozzle
- Dusting brush
- Accessory holder

!

The Electrolux Cyclone Power is for domestic use only. The vacuum cleaner has been designed to ensure maximum safety and performance. Please follow these simple safety precautions:

- The Cyclone Power is double insulated so it must not be earthed.
- The Cyclone Power is only to be used by adults. Young children or infirm persons should be supervised to ensure they do not play with the appliance.
- Always store in a dry place.
- Do not use to pick up liquids or wet material.
- Do not use to pick up hot cinders or lighted cigarette ends.
- Do not use near flammable gases.
- The vacuum cleaner must not be dragged or lifted by the electric cable. Check cable regularly for damage. Do not use your cleaner if the cable is damaged. If damaged the cable should be replaced at an Electrolux Service centre.
- The Plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- All service and repairs must be carried out by authorised Electrolux service staff.

1 2 3

1) Check that the filters are in place.
2) Insert the hose until the catch clicks to engage. (Press catch inwards to release).
3) Attach the telescopic tube to the hose handle and floor nozzle by pushing together. (Twist and pull apart to dismantle).
4) Extend the cable and connect to mains. The cleaner is fitted with cable rewind, ensure that the cable is not twisted before use. (Press foot pedal to rewind cable. Note: Please hold the plug to prevent it striking you or the machine).
5) Press the On/Off foot pedal to activate the cleaner.
6) The suction power is adjusted by opening/closing the aperture on the hose handle.

C

- A ①② Filter indicator – Filter 1 / Filter 2
- B ⏻ On/Off pedal
- C Cable rewind pedal
- D Carrying handle
- E Hose connection
- F Storage position for floor nozzle and tube when not in use
- G Mains cable
- H Parking position for floor nozzle and tube when in use
- I Locking catch for the dust compartment
- J Cyclone cone

Carpets: Use the floor nozzle with the lever in this position (For loose rugs reduce the suction power). Use the carpet revitaliser brush for picking up hair, fibres and for grooming your carpet.

Hard floors: Use the floor nozzle with the lever in this position.

Cleaning in confined areas: Use the crevice nozzle for crevices, corners and radiators.

Electrolux For healthier homes

Emptying the dust compartment

Empty the dust compartment after each vacuum cleaning or as necessary. For best results it is recommended that the dust compartment is emptied regularly.

K) • Press the locking catch and remove the dust compartment.
• Remove the filter holder from the dust compartment by pressing the green catch with your thumb.
• Empty the dust compartment. Tip - to prevent dust escaping, hold a plastic bag securely around the dust compartment and empty contents into bag. Wait 30 seconds for dust to settle before removing and sealing bag. Clean and dry the the compartment if required.
• Remove any particles from the Cyclone cone and replace filter holder ensuring it is properly inserted and fastened.
• Replace the dust compartment (reposition front first as shown in the diagram) until the locking catch clicks to engage. Do not try to force shut.

Cleaning the filters

There are two lifetime filters in your Cyclone Power. Should you ever need to replace them, use only original Electrolux filters.
Filter 1 / Cyclone Filter ref.EF102
Filter 2 / CleanStream® Filter ref.EF25

L) Cleaning of filter 1 when the filter ① indicator illuminates.
• Remove and empty the dust compartment as detailed above.
• Remove the filter cassette from the filter holder.
• Pull the orange tag to remove the sponge filter from cassette.
• Remove loose fibres and larger particles from the filter.
• Hand wash the filter or place in washing machine on a 40° C programme. Squeeze to remove excess water and leave to air dry. The filter must not be tumble-dried. Place the filter back into the filter cassette and filter holder ensuring it is completely dry.
• Replace the filter holder back into the Cleaner.
To avoid damaging the cleaner, do not use it without the filters in place. A safety device (orange button) prevents the insertion of the dust compartment if Filter 1 is not in place (Do not try to force shut). If the light is still on check for possible blockages in the nozzle, tube or hose.

M) Cleaning of Filter 2 / CleanStream® Filter, when the filter ② indicator illuminates.
• Open the filter cover and remove the filter.
• Rinse the inside (dirty side) of the filter under warm tap water keeping the outside dry. Do not use cleaning agents and avoid touching the delicate filter surface.
• Tap the filter frame to remove excess water. Repeat the cleaning procedure at least four times and allow the filter to air dry completely. The original filtering performance is now restored. Place the dry filter back into the cleaner and close the cover.

?

Power: If the cleaner does not start, disconnect from mains, check plug, cable and fuses where appropriate.

Blocked air flow and dirty filters: The cleaner stops automatically if a blockage occurs in the nozzle/tube/hose or if the filters or Cyclone cone are blocked with dirt. Disconnect from mains and allow the cleaner to cool for 20-30 minutes. Remove blockage and/or clean the filters. Restart the cleaner.

N) The clearing of blocked hoses is not covered by the guarantee. To avoid blockages and maintain suction efficiency, the floor nozzles should be cleaned regularly using the hose handle.

Water: If water is sucked into the cleaner the motor must be changed at an Electrolux Service Centre. This is not covered by the guarantee.

Electrolux decline all responsibility for all damages arising from any improper use of the appliance or in cases of tampering with the appliance.

Electrolux reserve the right to alter product appearance and/or specifications without notice. Not all models featured are available in all countries. Electrolux vacuum cleaner features and accessories are protected worldwide by Patents or Registered designs.

Something missing?
Don't understand the instructions?
Need more help?

We are only a telephone call away.
for the UK
Electrolux 08706 055 055
Local call cost Australia wide: 1300 369 333

K

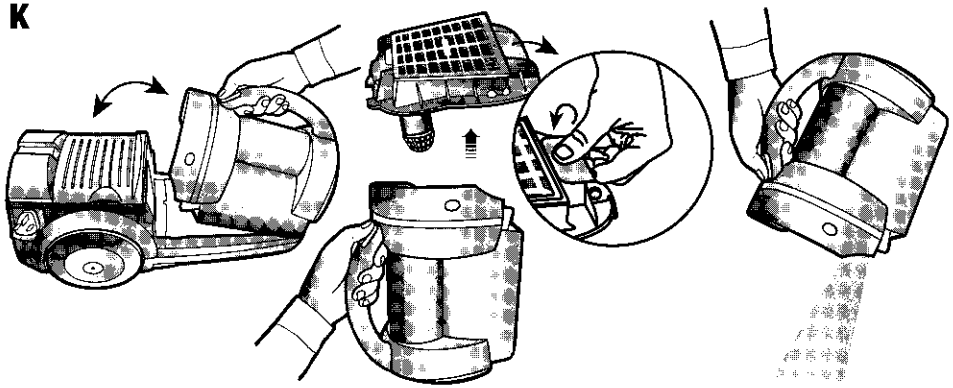

L

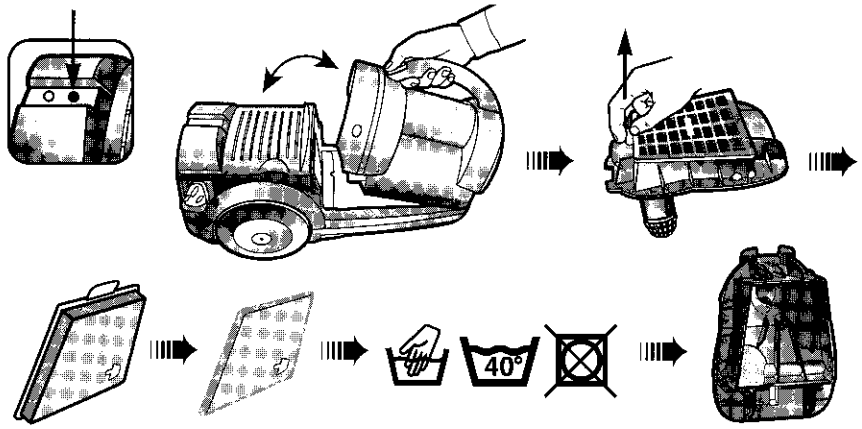

M

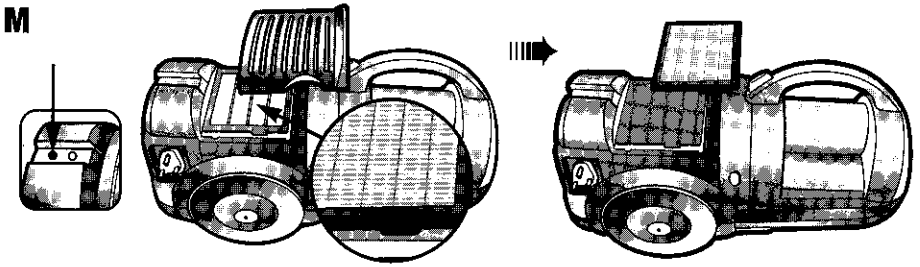

N